




USER MANUAL AND PRODUCT SPECIFICATIONS

ICE COLD ANYWHERE

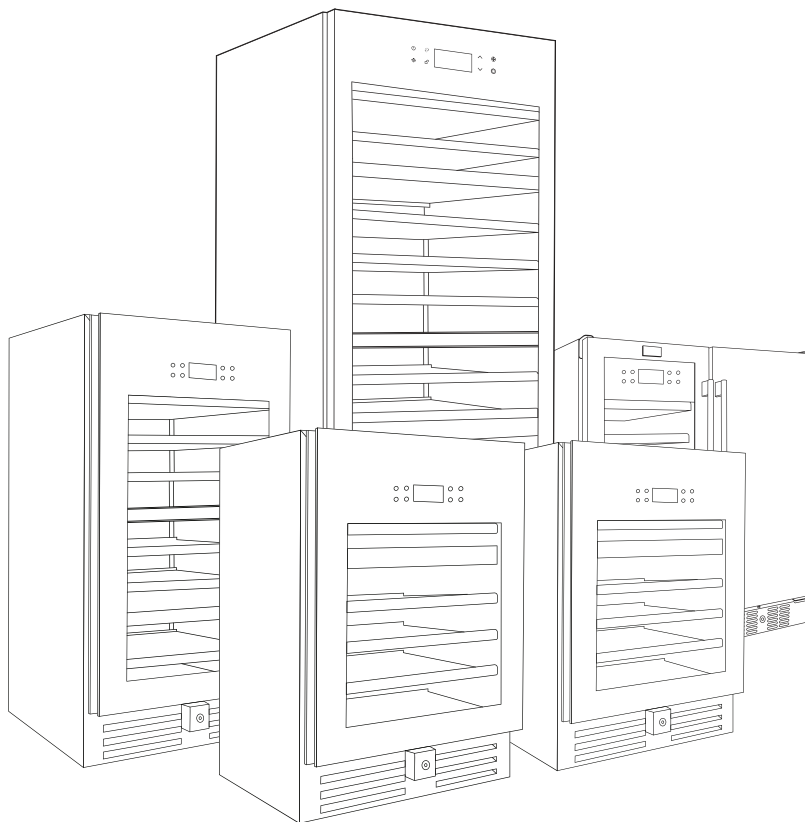

BEVERAGE & WINE • C O O L E R S •

MODELS: SMBC-145PRO(H) | SMWC-46PRO(H) |
SMWC-78PRO(H) | SMWC-158PRO(H) | SMBW-95-34

CONTENTS

WARRANTY, SERVICE AND SUPPORT _____ **01**

Warranty Registration

Service and Support

IMPORTANT SAFETY INFORMATION _____ **02**

Critical Safety Information

Disposing of the Appliance

PRODUCT FEATURES _____ **04**

Installation Instructions

Accessories

Structure

Control Panel

Operation Procedure

Installing Door Handle

Locking and Unlocking the Door

OPERATION PROCEDURE _____ **10**

Control Panel Operation

CLEANING THE APPLIANCE _____ **16**

Food Storage

Energy Saving Tips

TROUBLESHOOTING _____ **17**



THANK YOU FOR PURCHASING YOUR SNOMASTER BEVERAGE OR WINE COOLER

• WARRANTY, SERVICE AND SUPPORT •

This product is warranted for **2 years from the date of purchase**. Warranty does not cover products that have not been used in accordance with the user guide or are outside the warranty terms and conditions, which can be found at the following url:

<https://snomaster.co.za/warranty/>

WARRANTY REGISTRATION

Register your SnoMaster Beverage or Wine Cooler now for warranty, and allow us to provide you with the best possible after sales service:

- Please log onto our website at **www.snomaster.co.za**
- Click on the 'Warranty' tab.
- Enter warranty information and upload proof of purchase at the bottom of the page.

SERVICE AND SUPPORT

Should an instance arrive where you require assistance, contact our service team:

- Please log onto our website at **www.snomaster.co.za**
- Click on the 'Support' tab.
- Click 'Find a Repair Agent Near You' and enter your region.
- Alternatively contact us via email: **info@snomaster.co.za** or contact us on **+27 11 392 5315**.

IMPORTANT SAFETY INFORMATION

SNOMASTER BEVERAGE OR WINE COOLER

This manual contains important information including safety, installation, maintenance and warranty instructions of the SnoMaster Range of Beverage & Wine Coolers.

Please read this manual carefully before use and follow all safety information and instructions. It is recommended to keep this manual for easy reference so that you are familiar with the operation and maintenance of your appliance.

CRITICAL SAFETY INFORMATION

Before using this appliance, ensure it is correctly positioned and installed as outlined in this manual. Follow these basic precautions to prevent the risk of fire, electrical shock, or injury:

- This appliance is designed for domestic indoor use only and is exclusively intended for the storage of sealed beverages, wine and food stuffs.
- Ensure that the incline angle of the appliance is not more than 45° during transportation or operation.
- Before using your appliance for the first time, you should wait about 12 hours after positioning it in a place.
- The appliance needs to be levelled for optimal operation. You can adjust the appliance feet to level it +/- 10mm.
- Ensure the plug is easily accessible after positioning the appliance.
- Avoid connecting or disconnecting the electric plug with wet hands.
- To disconnect the appliance, grip the plug and pull it from the wall outlet. Never pull out the plug by the cord.
- It is advisable to use a dedicated power source and avoid using extension cords.
- Please unplug the appliance or disconnect the power before performing any cleaning, maintenance, or servicing.

- If the appliance power supply cord is damaged, it must be replaced by SnoMaster, its approved agent, or a similarly qualified person to prevent any hazard.
- It is recommended that the circuit breaker size should be no more than 20 amps.
- This appliance operates on a single-phase voltage of 220V-240V/50Hz, to avoid electrical surges, it is advised to use a surge protector plug.
- Cleaning and maintenance should be supervised by adults, especially if children are involved.
- The appliance should be placed on a flat surface and should be completely unobstructed. Ensure to leave 150mm space around the appliance to ensure proper ventilation for the appliance. Place the appliance away from direct sunlight and heat sources (stove, heater, radiator, etc.).
- Unless specifically recommended in this manual, do not attempt to repair or replace any part of the appliance. All other servicing should be referred to a qualified technician.
- Never clean appliance parts with flammable fluids as they may create a fire hazard or explosion. Also, avoid storing or using petroleum or other flammable vapours and liquids near this appliance.
- Avoid solvent-based cleaning detergents or abrasives on the interior or exterior as they may damage or discolour it.



This appliance contains CYCLOPENTANE and R600a refrigerant , which is FLAMMABLE and may cause a fire or an explosion.



WHEN DISPOSING OF THE APPLIANCE

- Detach the door gasket and unlock the door to keep the door from being tightly closed.
- Always ensure the appliance is out of reach of children. Before disposing of it, damage the body to prevent children from climbing inside, ensuring their safety.
- Follow the instructions of your local regulations when disposing of this appliance.

SMBC-145PRO(H) PRODUCT FEATURES:

**TEMPERED GLASS HEATED DOOR (LEFT HINGED ONLY) |
EXTERNAL LED TOUCH DISPLAY (LOCKABLE) | DOOR LOCK |
INTERNAL LED LIGHT | SLIDING METAL SHELVES WITH WOODEN
TRIM | FAN ASSISTED COOLING | COMPRESSOR COOLED | FRONT
VENTING**

SPECIFICATIONS:

- **Dimensions (mm) Unit:** (H) 875 (L) 595 (W) 570
 - **Dimensions (mm) Packaged:** (H) 930 (L) 660 (W) 630
 - **Net Weight:** 43Kg
 - **Storage Volume:** 145L
 - **Temperature Range:** 2°C - 20°C
 - **Voltage:** 220V-240V/50Hz
 - **Total Input Power:** 135W
 - **Rated Current:** 0.8A
 - **Refrigerant:** R600a
 - **Foaming Agent:** Cyclopentane
-

SMWC-46PRO(H) PRODUCT FEATURES:

**TEMPERED GLASS HEATED DOOR (RIGHT HINGED ONLY) |
EXTERNAL LED TOUCH DISPLAY (LOCKABLE) | DOOR LOCK |
INTERNAL LED LIGHT | SLIDING BEECHWOOD SHELVES | FAN
ASSISTED COOLING (DUAL ZONE) | COMPRESSOR COOLED |
FRONT VENTING**

SPECIFICATIONS:

- **Dimensions (mm) Unit:** (H) 875 (L) 595 (W) 570
- **Dimensions (mm) Packaged:** (H) 930 (L) 660 (W) 630
- **Net Weight:** 48Kg
- **Storage Volume:** Up To 46 Bottles*
- **Upper Temperature Range:** 2°C - 20°C
- **Lower Temperature Range:** 2°C - 20°C
- **Voltage:** 220V-240V/50Hz
- **Total Input Power:** 135W
- **Rated Current:** 0.8A
- **Refrigerant:** R600a
- **Foaming Agent:** Cyclopentane

SMWC-78PRO(H) PRODUCT FEATURES:

TEMPERED GLASS DOOR (RIGHT HINGED ONLY) | EXTERNAL LED TOUCH DISPLAY (LOCKABLE) | DOOR LOCK | INTERNAL LED LIGHT SELECTION | SLIDING BEECHWOOD SHELVES | FAN ASSISTED COOLING (DUAL ZONE) | COMPRESSOR COOLED | FRONT VENTING

SPECIFICATIONS:

- **Dimensions (mm) Unit:** (H) 1215 (L) 595 (W) 680
 - **Dimensions (mm) Packaged:** (H) 1260 (L) 745 (W) 660
 - **Net Weight:** 72Kg
 - **Storage Volume:** Up To 78 Bottles*
 - **Upper Temperature Range:** 2°C - 20°C
 - **lower Temperature Range:** 2°C - 20°C
 - **Voltage:** 220V-240V/50Hz
 - **Total Input Power:** 190W
 - **Rated Current:** 0.5A
 - **Refrigerant:** R600a
 - **Foaming Agent:** Cyclopentane
-

SMWC-158PRO(H) PRODUCT FEATURES:

TEMPERED GLASS DOOR (RIGHT HINGED ONLY) | EXTERNAL LED TOUCH DISPLAY (LOCKABLE) | DOOR LOCK | INTERIOR LED LIGHT SELECTION | SLIDING BEECHWOOD SHELVES | FAN ASSISTED COOLING (DUAL ZONE) | COMPRESSOR COOLED | FRONT VENTING

SPECIFICATIONS:

- **Dimensions (mm) Unit:** (H) 1835 (L) 655 (W) 680
- **Dimensions (mm) Packaged:** (H) 1880 (L) 750 (W) 700
- **Net Weight:** 128Kg
- **Storage Volume:** Up To 158 Bottles*
- **Upper Temperature Range:** 2°C - 20°C
- **lower Temperature Range:** 12°C - 20°C
- **Voltage:** 220V-240V/50Hz
- **Total Input Power:** 190W
- **Rated Current:** 1.1A
- **Refrigerant:** R600a
- **Foaming Agent:** Cyclopentane

SMBW-95-34 PRODUCT FEATURES:

TEMPERED GLASS DOOR (LHS) | SOLID MATT BLACK STEEL DOOR (RHS) | EXTERNAL LED TOUCH DISPLAY (LOCKABLE) | BOTH SIDES LOCKABLE DOORS | INTERNAL LED LIGHTS (BOTH SIDES) | SLIDING BEECHWOOD SHELVES (LHS) | SLIDING METAL SHELVES WITH BEECHWOOD TRIM (RHS) | FAN ASSISTED COOLING (DUAL COMPARTMENT) | COMPRESSOR COOLED | FRONT VENTING

SPECIFICATIONS:

- **Dimensions (mm) Unit:** (H) 860 (L) 765 (W) 605
 - **Dimensions (mm) Packaged:** (H) 910 (L) 625 (W) 810
 - **Net Weight:** 52Kg
 - **Storage Volume (Left):** Up To 32 Bottles*
 - **Storage Volume (Right):** 95L
 - **Left Temperature Range:** 2°C - 20°C
 - **Right Temperature Range:** 2°C - 20°C
 - **Voltage:** 220V-240V/50Hz
 - **Total Input Power:** 120W
 - **Rated Current:** 0.8A
 - **Refrigerant:** R600a
 - **Foaming Agent:** Cyclopentane
-



INSTALLATION INSTRUCTIONS




Before installing your new appliance, please read all safety instructions in this manual and follow the installation instructions below:

- Remove the appliance from the box, ensure all packaging materials, stickers and films are removed from the product. Clean the appliance's surfaces with a mild detergent and a damp cloth before initial use.
- Clean the interior, shelving and glass door with a mild detergent and damp cloth before initial use.
- Ensure the appliance is placed on a level, sturdy surface.
- **Caution:** Installing the appliance on carpeting may lead to discolouration due to heat emission from the compressor.
- Ensure adequate air circulation for the appliance by maintaining a clearance of at least 150mm on all sides.


SMBC-145PRO(H) STRUCTURE:

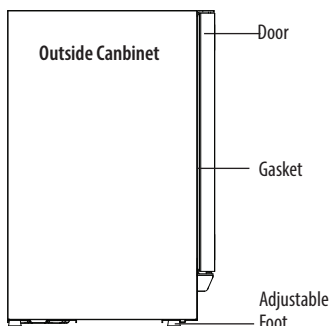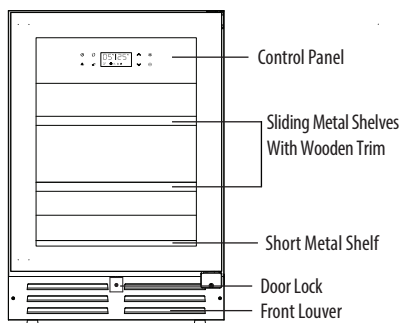

ACCESSORIES INCLUDED:


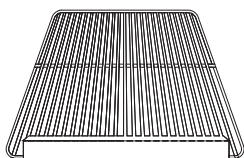


3 x METAL DISPLAY
SHELVES

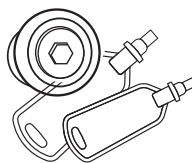


1 x DOOR
LOCK & KEYS


SMWC-46PRO(H) STRUCTURE:

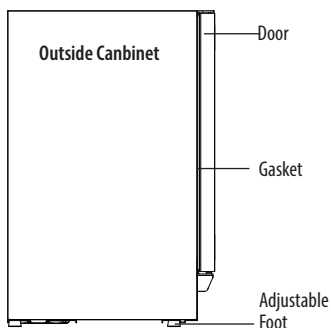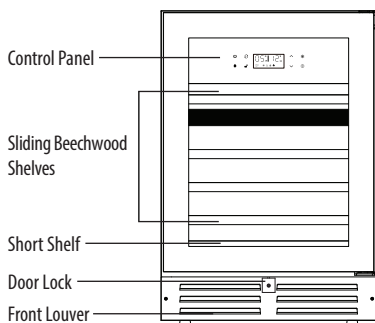

ACCESSORIES INCLUDED:

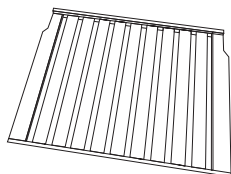


6 x BEECHWOOD
DISPLAY SHELVES

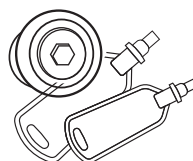


1 x DOOR
LOCK & KEYS


SMWC-78PRO(H) STRUCTURE:

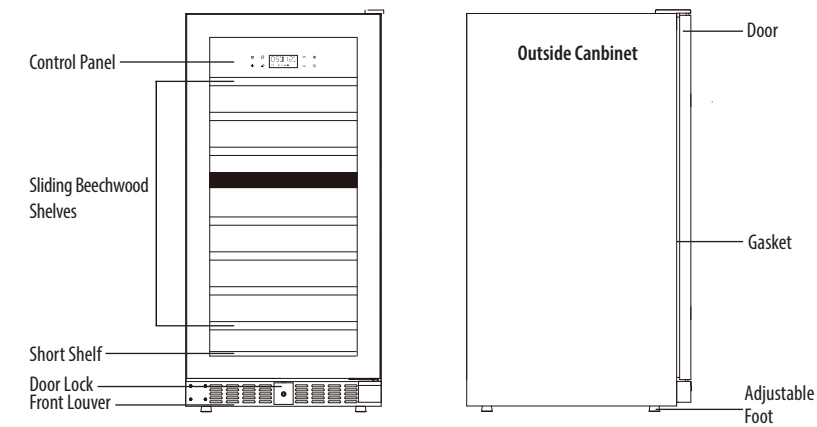


ACCESSORIES INCLUDED:

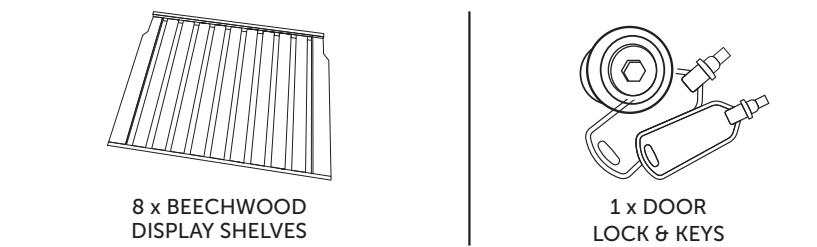


SMWC-158PRO(H) STRUCTURE:

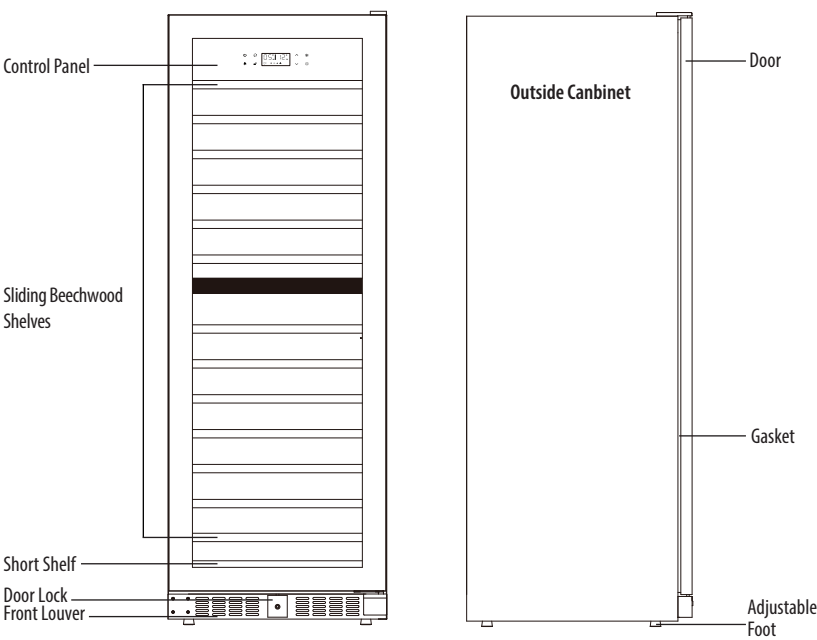

ACCESSORIES INCLUDED:


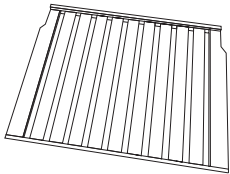


14 x BEECHWOOD
DISPLAY SHELVES

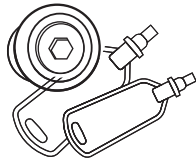


1 x DOOR
LOCK & KEYS


SMBW-95-34 STRUCTURE:

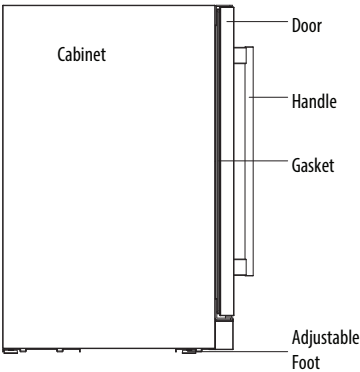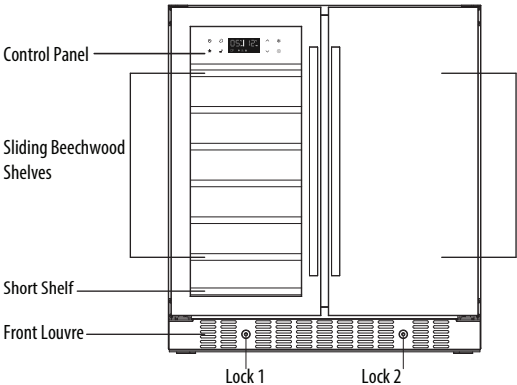

ACCESSORIES INCLUDED:

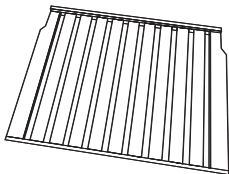


7 x BEECHWOOD
DISPLAY SHELVES

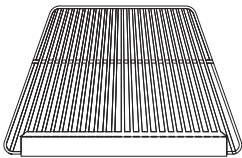

3 x METAL DISPLAY
SHELVES



2 x DOOR
HANDLES

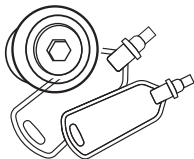


1 x DOOR
LOCK & KEYS

INSTALLING THE DOOR HANDLE:

STEP 1 Remove the gasket on the interior of the door to expose the two screw holes

STEP 2 Install the handle with the screws & washers provided

STEP 3 Reinstall the gasket

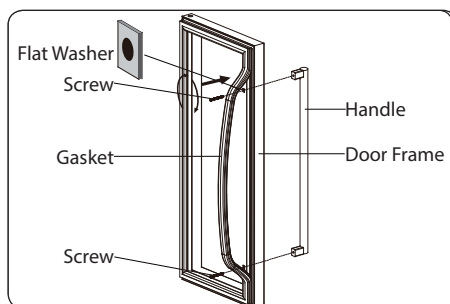

LOCKING AND UNLOCKING THE DOOR

- The door lock is an optional function on some beverage & wine cooler models. If your beverage or wine cooler has this function, a key will have been supplied inside the packaging inside this manual.
- Insert the key into the lock and turn it counter-clockwise to unlock the door. To lock the door, turn the key clockwise.
- Ensure to store the key in a safe place.

OPERATION PROCEDURE

WORKING CLIMATE

- The beverage or wine cooler is designed for operating under climate class 5 (see below climate class chart). It is recommended to maintain the ambient temperature around 22-25°C.


Climate Class	Ambient Temperature
5	18 - 43 °C (64°F-109°F)

- If the ambient temperature exceeds the recommended range of 22–25°C, or if the unit is placed in a high-humidity area, condensation may form on the doors. This is normal. To reduce condensation, either increase the internal temperature setting or move the appliance to a cooler, less humid environment.
- If the ambient temperature is above or below the designed climate range, the performance of the appliance may be affected. I.e. if the appliance is operating in extreme hot or cold conditions, the interior temperatures may fluctuate, and the set temperature of 2-20°C may not be reached.

WINE STORAGE

- Wine cooler capacity and shelves are based on standard Bordeaux bottle storage. The maximum loaded bottles may vary based on the different size or dimension of wine bottles stored.
- The shelves with telescopic rails can be pulled out for easy access to wine storage.
- For 2-Fold telescopic rails, the shelf can be pulled out at a maximum of 40%.
- For 3-Fold telescopic rails, the shelf can be pulled out at a maximum of 70%.


NOTE: For metal shelves, it is recommended to only pull them out a maximum of 1/3 for easy access to beverages.

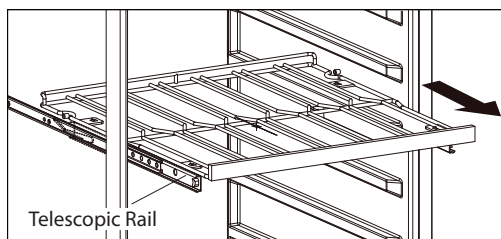

- To prevent damaging the door gasket, ensure to open the door all the way before pulling the shelves out.
- Ensure to only store wine in sealed bottles to avoid staining the shelves.
- Do not cover the shelves with aluminium foil or any other shelf material, which may prevent air circulation.


REMOVING THE SHELVES

- Before removing a telescopic shelf from the appliance, ensure to remove all the bottles on the shelf.
- Pull out the shelf to align the shelf grooves to the stoppers fixed on the inside cabinet.
- Push the shelf upward from the telescopic rails and remove it carefully.

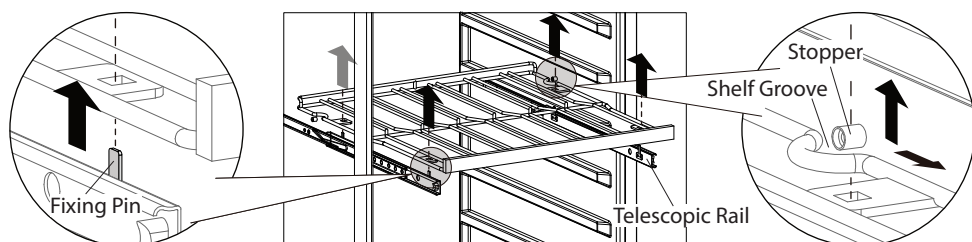


CONTROL PANEL

FOR SINGLE ZONE

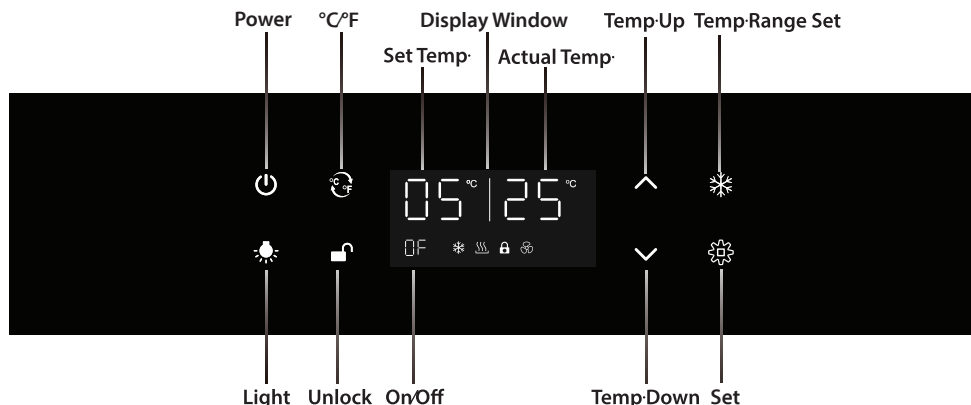

FOR DUAL ZONE

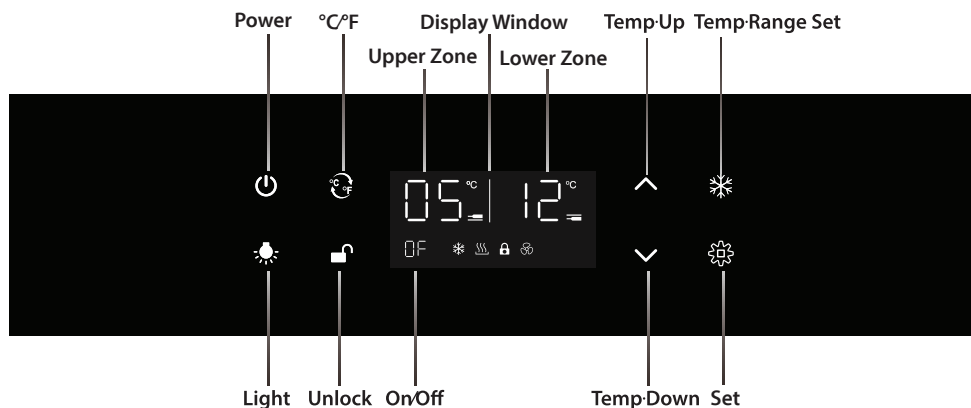

POWER ON/OFF CONTROL



POWER

- Press to turn on the control panel back light buttons, if they are off.
- To turn off your appliance for extended periods or for cleaning, press and hold the power button for 10 seconds and your appliance will power turn off. Once the appliance has been turned off, ensure to leave your appliance for at least 5 minutes before turning it back on again. This will limit excessive wear and tear on the compressor.

UNLOCKING THE CONTROL PANEL



- Press and hold the unlock button for 3 seconds to unlock the control panel.

NOTE:

The control panel will lock automatically when left untouched for 15 seconds. Make sure unlock the panel before setting. With the exception of the power button, all other buttons' back light will turn off when the control panel is left untouched for 15 seconds.

UNLOCKING THE CONTROL PANEL



Light

- Depending on the model, your appliance is equipped with 3 different lighting options: Red, Blue, or a Red & Blue cycle where the colour changes every 10 seconds. Press the light button once and the lights will run on a 10-second cycle, alternating between Red & Blue. Press the light button again and the colour will change to only Blue; or press the light button again and the colour will to Red. Pressing the light button a 4th time will turn the lights off.

Blue → Red → Off → Red/Blue (Interchange by 10s)

 


SELECTING FAHRENHEIT (°F) & CELSIUS (°C)



- Press to alter the temperature display to Fahrenheit or Celsius.

TEMPERATURE SETTING



Set

FOR SINGLE ZONE

- Press to set temperature. The display will flash, allowing you to adjust the temperature setting.

FOR DUAL ZONE


- Press to select Upper/Lower zone to set the temperature. The display will flash, allowing you to adjust the temperature setting.



- Press to increase the temperature by 1°.



- Press to decrease the temperature by 1°.

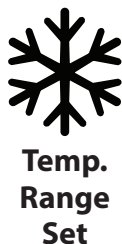

- Press to change the temperature set-range between E, F, H, L wait for 3 seconds to confirm your option. Your appliance is factory set as 'E', which is the ideal temperature for the storage of beverages and wine.

For Single Zone:


Display	Temp.Range
E (Default)	5 - 22 °C (41°F-72°F)
F	2 - 20 °C (36°F-68°F)
H	10 - 19 °C (50°F-66°F)
L	0 - 20 °C (36°F-68°F)

For Dual Zone:

Display	Temp.Range	
	Upper Zone	Lower Zone
E (Default)	5 - 12 °C (41°F-54°F)	12 - 22 °C (54°F-72°F)
F	2 - 12 °C (36°F-54°F)	12 - 20 °C (54°F-68°F)
H	5 - 12 °C (41°F-54°F)	8 - 19 °C (46°F-66°F)
L	2 - 10 °C (36°F-50°F)	12 - 22 °C (54°F-72°F)

SURGE PROTECTOR PLUG

TO AVOID ELECTRICAL SURGES, IT IS ADVISED TO USE A SURGE PROTECTOR PLUG.

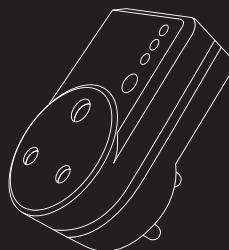

FOR SINGLE ZONE

05 °C

- Set temperature of the appliance.

25 °C


- Actual temperature of the appliance.

ON

- Display Window is on.

OF

- Display Window is Off

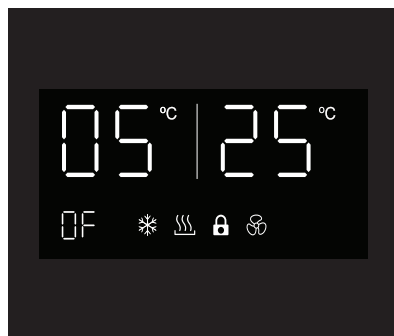

FOR DUAL ZONE

Set temperature of Upper Zone

05 °C

-

12 °C


- Set temperature of Lower Zone

ON

- Display Window is on.

OF

- Display Window is Off

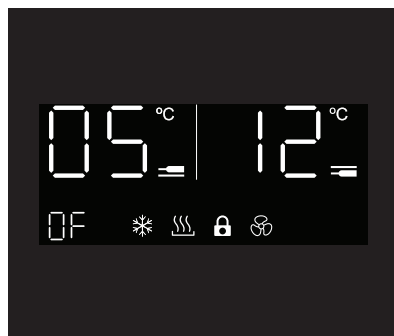

For a less obtrusive appearance, you can turn off the display window by pressing the °C/°F button for 5 seconds while the control panel is locked.

Once the ON/OFF indicator flashes, press °C/°F a second time to enter into the interface. 'ON' will be displayed at all times, while 'OF' will turn off the display window. To confirm your selection, leave the control panel for 5 seconds.

CLEANING THE APPLIANCE

To ensure safety, remember to always disconnect the appliance from the power supply before any form of maintenance or cleaning.

INTERNAL CLEANING

- Remove accessories from the appliance. Accessories can be cleaned separately with soap and water. Do not put them in the dishwasher.
- Do not use any abrasive materials or detergents.
- After washing, rinse with clean water and dry carefully.
- When you are done cleaning the appliance reconnect the plug with dry hands.

EXTERNAL CLEANING

- DO NOT POUR WATER OVER THE APPLIANCE.
- Wash the exterior of the appliance with warm soapy water.
- PLEASE DO NOT use abrasive materials or detergents.
- Be careful of sharp edges under the appliance.
- Once or twice a year, dust the compressor at the back with a brush or a vacuum cleaner, as over time it accumulates dust and that may affect the performance of the appliance and cause increased energy consumption.
- Do not use any sharp objects for cleaning.
- Do not wash the appliance with direct or high-pressure water jets.

FOOD STORAGE

- The appliance compartment is suitable for short-term storage of fresh food. The temperature inside varies depending on the amount of food stored.
- Do NOT overload the fridge and ensure you keep enough space around items for cold air flow.
- Do not block any ventilation openings.

ENERGY SAVING TIPS

- Place the appliance in the coolest area of the room, away from any heat-producing appliances and out of direct sunlight.
- Do NOT overload the appliance as the compressor will run longer.
- Do not set the thermostat on excessively cold temperatures.
- To maintain good cooling efficiency and save energy, we recommend less frequent opening and closing of the appliance door.

TROUBLESHOOTING

Should you experience any issues with your appliance and the below troubleshooting tips do not resolve the fault experienced, kindly contact SnoMaster Service Department or your nearest accredited Service Agent:

PROBLEM	PROBLEM POSSIBLE CAUSE / MEASURE
Appliance is not turning on	• Check if the appliance is correctly switched on. • Check if there has not been loadshedding or a power cut. • Check if plug is not faulty or damaged. • Check if voltage is correct.
Temperature within the appliance is not getting cold enough	• Check that the appliance is not overloaded. • Check if appliance is not placed in direct sunlight. • Check if door is closed completely/ not frequently opening the appliance. • Check door gasket if not sealing properly and check for damages or tears on the gasket. • Ensure the appliance has the correct clearances at the sides/back.
Temperature within the appliance is too cold	• Please relocate the appliance to a warmer area, preferably at room temperature. • Not enough ventilation around the unit. • Check if Thermostat probe is not faulty, if so please contact SnoMaster support to replace.
Moisture forms on the inside/ outside walls of the appliance	• Hot and humid weather usually in the coastal locations increases the internal rate of condensation. This is normal. • Set the temperature to a higher setting to avoid condensation. • Condensation may occur seasonally depending on humidity and ambient temperature. • Open the door less frequently and ensure it is closed properly at all times.
Exterior of appliance is wet	Condensation will form on the outside of the appliance if it operates in humid areas or in the rainy season, simply wipe it dry with a non-abrasive cloth.

TROUBLESHOOTING

PROBLEM	PROBLEM POSSIBLE CAUSE / MEASURE
Smell/Odour	• Check for spillages on each shelf/drawer. You may need to remove the shelves/drawers to check that no spillages have settled underneath them. • Double check if all foods and drinks in the appliance have not expired. If they have expired, then they should be removed immediately. • Placing charcoal in the appliance for a while can also help eliminate the smell/odour.
Door does not close properly	• Check if door gasket/seal is not torn or worn out. • Check if door compartments and shelves are correctly placed inside the appliance. • Check if the appliance is leveled. • Ensure there are no obstructions preventing the door closure.
Unusual noises/ Gurgling or Cracking Noises	• Ensure appliance is positioned level on the ground. • Caused by the flow of refrigerant when each cooling cycle ends. • Check if there is enough spacing around the appliance and ensure it is not touching other items. • This is normal, as the appliance makes a sound when the unit is expanding and contracting along its walls. • The pipes might be touching or some parts came lose, please contact a service agent.
Appliance door not opening	• If the door has just been opened, leave it for a minutes to allow air pressure to equalize before trying to open it again.
Exterior surface is warm	• This is normal while the compressor works to transfer heat from inside the appliance cabinet it can reach up 70-90°C.
Compressor runs for 1-5 mins/continuously	• The ambient temperature is too high, please relocate the appliance to a better ventilated or cooler place. • The voltage is incorrect, switch off the appliance and restart when the power has stabilised.

TROUBLESHOOTING

PROBLEM	PROBLEM POSSIBLE CAUSE / MEASURE
Compressor runs but the compartment is not getting cold	• The appliance has leaked or the system may be blocked please contact a service agent.
The digital display is not turning on	• Check that the appliance is correctly switched on. • Check that the plug is not damaged or faulty. • The Main control board is damaged or faulty and needs to be replaced.
Control Panel is Displaying 'LL' or 'HH' and/or a continuous buzzing sound is heard	• The temperature probe is faulty or damaged and needs to be replaced. Contact a service agent.
The digital display buttons are not functional	• The temperature controller panel is damaged. Contact a service agent.
The interior LED light does not switch on	• The LED light needs to be replaced. • The Main control board is faulty or damaged. • The light panel is faulty or damaged.



ICE COLD ANYWHERE

**JOHANNESBURG LIFESTYLE
CENTRE & SERVICE CENTRE**

49 Koornhof Road
Meadowdale
Germiston, 1614
011 392 5315 / 3147
info@snomaster.co.za

**CAPE TOWN LIFESTYLE CENTRE
& SERVICE CENTRE**

31 Stella Road
Montague Gardens
Cape Town, 7441
021 100 5695
info@snomaster.co.za

snomaster.co.za



[@SnoMasterSA](#)



[SnoMaster SA](#)



[snomaster_south_africa](#)



[@SnoMaster](#)