




**USER MANUAL
AND PRODUCT
SPECIFICATIONS**

ICE COLD ANYWHERE

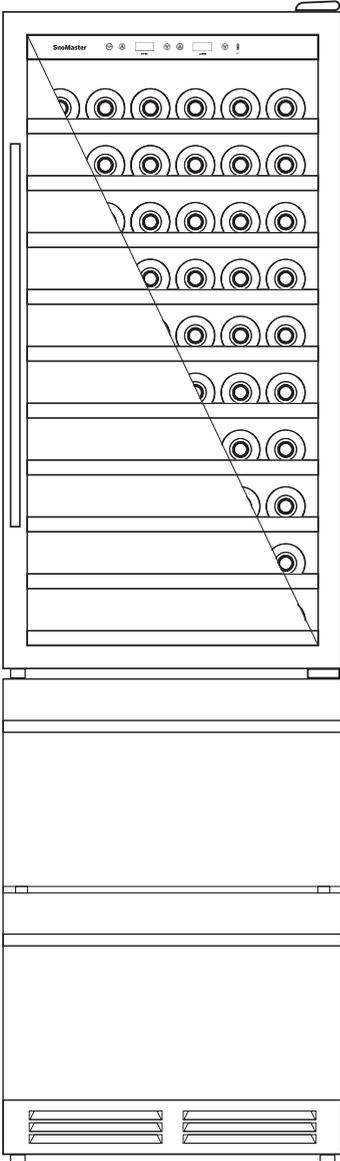

VT-194D

UPRIGHT 108 BOTTLE
WINE COOLER

WITH 2-REFRIGERATOR DRAWERS

⚡WARNING⚡




SAFETY REQUIREMENTS – REFRIGERATORS ARE TO BE STABLE WHEN DOORS AND/OR DRAWERS ARE OPEN AND FULLY LOADED. THE INCLUDED ANTI-TIP BRACKETS MUST BE INSTALLED TO THE GROUND AS INDICATED BELOW.

ANTI-TIP BRACKET INSTALLATION

⚡WARNING⚡

To avoid the risk of serious personal injury, damage to the appliance as well as to prevent a tipping hazard, it must be secured to the floor with anti-tip brackets and screws (supplied). Before installing, carefully read these instructions.

- A. Take the anti-tip brackets (2pcs) and screws (2pcs) out of the instruction packet.
- B. Drill holes into the floor according to the dimensions shown below. This will allow you to fix the brackets to the floor.
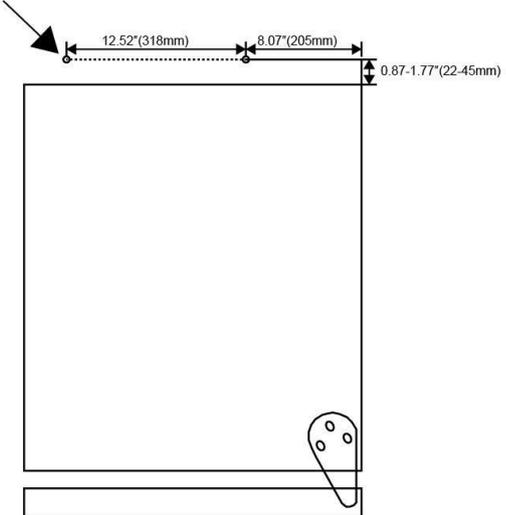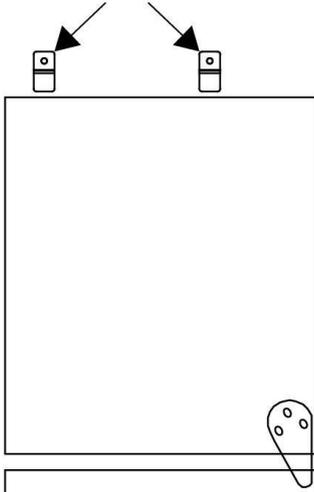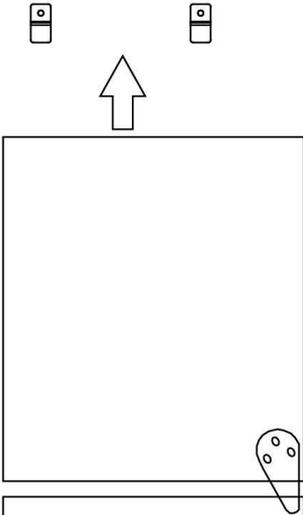
<p>According to size and location, the hole punched on the floor should be $\varnothing 10''$.</p>	<p>Use two expansion screws to fix feet on the floor</p>						
							
<p>Push the appliance into its place of installation</p>	<p>If the unit is not stable, pull out the appliance and repeat the previous step until the unit is stable.</p>						
	<p>Note: If the unit is relocated, the bracket must be removed and installed in the new location.</p> <table border="1" style="width: 100%; border-collapse: collapse;"> <tr> <td style="width: 30%; text-align: center;">  </td> <td style="width: 30%;">Anti-tip bracket</td> <td style="width: 40%; text-align: center;">2 Pcs</td> </tr> <tr> <td style="text-align: center;">  </td> <td>Expansion bolt</td> <td style="text-align: center;">2 Pcs</td> </tr> </table>		Anti-tip bracket	2 Pcs		Expansion bolt	2 Pcs
	Anti-tip bracket	2 Pcs					
	Expansion bolt	2 Pcs					

CONTENTS

WARRANTY, SERVICE AND SUPPORT	01
Warranty Registration	
Service and Support	
IMPORTANT SAFETY INFORMATION	02
Before Using Your Appliance	
Critical Safety Information	
PRODUCT FEATURES	04
Specifications	
INSTALLATION INSTRUCTIONS	04
Accessories Included	
STRUCTURE	05
Shelving	
Moving of Shelves	
Installing the Door Handle	
Reversing the Door	
CONTROL PANEL	10
OPERATION PROCEDURE	10
CLEANING AND MAINTENANCE	11
TROUBLESHOOTING	12



THANK YOU FOR PURCHASING THE SNOMASTER VT-194D, UPRIGHT 108 BOTTLE WINE COOLER WITH 2-REFRIGERATOR DRAWERS

• WARRANTY, SERVICE AND SUPPORT •

This product is warranted for **5 years on the compressor, 3 years on the unit and 1 year on all parts not listed from the date of purchase**. Warranty does not cover products that have not been used in accordance with the user guide or are outside the warranty terms and conditions, which can be found at the following URL:

<https://snomaster.co.za/warranty/>

WARRANTY REGISTRATION

Register your SnoMaster VT-194D, Upright 108 Bottle Wine Cooler With 2-Refrigerator Drawers now for warranty, and allow us to provide you with the best possible after sales service:

- Please log onto our website at **www.snomaster.co.za**
- Click on the 'Warranty' tab.
- Enter warranty information and upload proof of purchase at the bottom of the page.

SERVICE AND SUPPORT

Should an instance arrive where you require assistance, contact our service team:

- Please log onto our website at **www.snomaster.co.za**
- Click on the 'Support' tab.
- Click 'Find a Repair Agent Near You' and enter your region.
- Alternatively contact us via email: **info@snomaster.co.za** or contact us on **+27 11 392 5315**.

IMPORTANT SAFETY INFORMATION

VT-194D, UPRIGHT 108 BOTTLE WINE COOLER WITH 2-REFRIGERATOR DRAWERS

This manual contains important information including safety, installation, maintenance and warranty instructions of the SnoMaster VT-194D, Upright 108 Bottle Wine Cooler With 2-Refrigerator Drawers. Please read this manual carefully before use and follow all safety information and instructions. It is recommended to keep this manual for easy reference so that you are familiar with the operation and maintenance of your appliance.

Before using this appliance, ensure it is correctly positioned and installed as outlined in this manual. Follow these basic precautions to prevent the risk of fire, electrical shock, or injury:

- This appliance is designed for domestic or commercial indoor use only and is exclusively intended for storing beverages and foodstuffs.
- Ensure the incline angle of the appliance is not more than 45° during transportation or operation.
- Before using your appliance for the first time, you should wait about 12 hours after positioning it in place.
- Ensure sufficient personnel are available to move and install the appliance to prevent damage or injuries.
- The appliance needs to be levelled for optimal operation. You can adjust the appliance feet to level it +/- 10mm.
- Ensure the plug is easily accessible after positioning the appliance.
- Avoid connecting or disconnecting the electric plug with wet hands.
- To disconnect the appliance, grip the plug and pull it from the wall outlet. Never pull out the plug by the cord.
- It is advisable to use a dedicated power source and avoid using extension cords.
- Please unplug the appliance or disconnect the power before performing any cleaning, maintenance, or servicing.
- If the appliance power supply cord is damaged, it must be replaced by SnoMaster, its approved agents, or a similarly qualified person to prevent any hazard.

- It is recommended that the circuit breaker size should be no more than 20 amps.
 - This appliance operates on a single-phase voltage of 220V/50Hz, to avoid electrical surges, it is advised to use a surge protector plug.
 - Cleaning and maintenance should be supervised by adults, especially if children are involved.
 - The appliance should be placed on a flat surface and should be completely unobstructed. Ensure to leave 150mm space around the appliance to ensure proper ventilation of the appliance. Place the appliance away from direct sunlight and heat sources (stove, heater, radiator, etc.).
 - Unless specifically recommended in this manual, do not attempt to repair or replace any part of the appliance. All other servicing should be referred to a qualified technician.
 - Never clean appliance parts with flammable fluids as they may create a fire hazard or explosion. Also, avoid storing or using petroleum or other flammable vapours and liquids near this appliance.
 - Avoid solvent-based cleaning detergents or abrasives on the interior or exterior as they may damage or discolour it.
- **This appliance contains CYCLOPENTANE and R600a gas, which is FLAMMABLE and may cause a fire or an explosion.**
-



WHEN DISPOSING OF THE APPLIANCE

Please observe the following instructions:

- Always ensure the appliance is out of reach of children. Before disposing of it, damage the body and remove the doors and drawers to prevent children from climbing inside.
- Follow the instructions of your local regulations when disposing of the appliance.

PRODUCT FEATURES

TEMPERED GLASS REVERSIBLE DOOR | 2-REFRIGERATOR DRAWERS | 9 + 1 BEECHWOOD SHELVING | FAN ASSISTED COOLING | INTERIOR LED LIGHT | INTERNAL DIGITAL THERMOSTAT

SPECIFICATIONS:

- **Dimensions (mm) Unit:** (H) 1950 (L) 598 (W) 690
 - **Dimensions (mm) Packaged:** (H) 1975 (L) 660 (D) 770
 - **Wine Cooler Storage Volume:** Up to 108 Bottles*
 - **Refrigerator Drawer Storage Volume:** 54L (Top) / 45L (Bottom)
 - **Temperature Zone:** 5°C to 22°C (Top) / 1°C to 8°C (Bottom)
 - **Net Weight:** 117Kg
 - **Voltage:** 220V/50HZ
 - **Rated Current:** 0.1A
 - **Power Input:** 170W
 - **Suggested Applications:** Café, Restaurant, Bar, Pub, Kitchen, Office
 - **Design Criteria:** Engineered for the African Climate
- *Bottle Capacity is Based On Standard Bordeaux Wine Bottles. Capacity Will Vary Depending On Bottle Sizes.*
-


INSTALLATION INSTRUCTIONS



Before installing your new appliance, please read all safety instructions in this manual and follow the installation instructions below:

- Remove the appliance from the box, ensure all packaging materials, stickers and films are removed from the product. Clean the appliance's surfaces with a mild detergent and a damp cloth before initial use.
- Clean the interior, shelving, refrigerator drawers and glass door with a mild detergent and damp cloth before initial use.
- Ensure the appliance is placed on a level, sturdy surface.
- **Caution:** Installing the appliance on carpeting may lead to discolouration due to heat emission from the compressor.
- Ensure adequate air circulation for the appliance by maintaining a clearance of at least 150mm on all sides.

ACCESSORIES INCLUDED

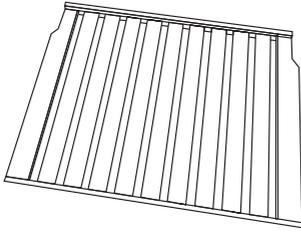


9 + 1 x BEECHWOOD
SHELVES



1 x Door Handle

STRUCTURE

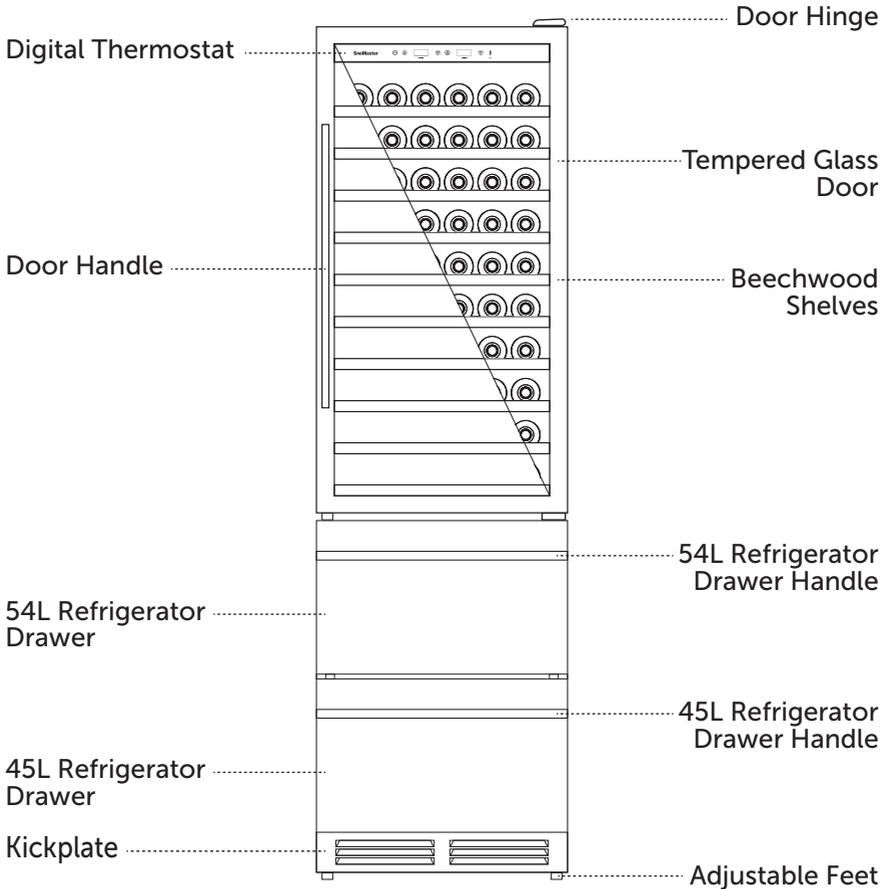


SHELVING

Your appliance was designed to store a maximum number of bottles securely. We recommend that you observe the tips below to optimise loading:


- Remove all packing materials from shelves once appliance is stable and ready for bottle storage.
- Disperse the bottles evenly to avoid concentrating weight in one place. This also helps to provide an even temperature range throughout the appliance.
- Make sure that the bottles are not all grouped together (either at the top or the bottom of the cabinet).
- Maximum capacity per shelf is 20Kg.
- Never try to pull out more than one rolling shelf at a time as it can cause the appliance to tip forward.
- You can remove a shelf to accommodate larger diameter bottles on the shelf below it.

MOVING OR REMOVING SHELVES

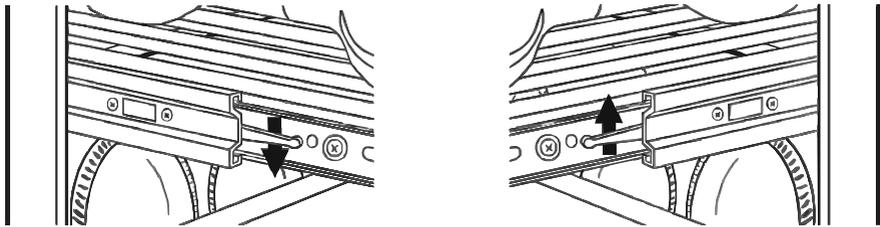

1. To remove the rolling shelf, remove all bottles and pull the shelf out (as far as it can go).
2. Push the left side lever downward, while pushing the right side lever upwards (as illustrated above).
3. Push the rail back into the cabinet and stow away the shelf in a cool, dark place, should you want to reinstall it again at a later stage.

INSTALLING THE DOOR HANDLE

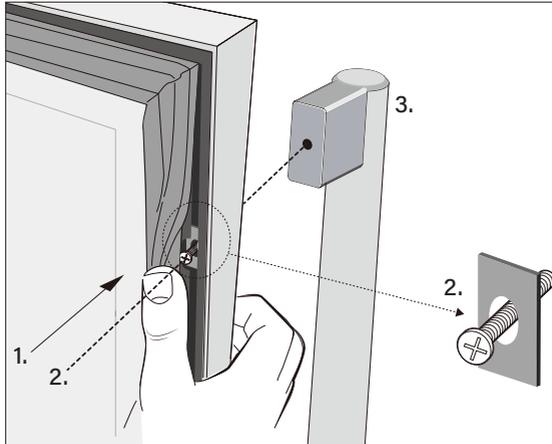

1. Pull back the door seal/gasket behind the handle location.
2. Insert screws into the pre-drilled screw holes.
3. Attach handle and tighten screws.
4. Press door seal/gasket back into place.

REVERSING THE DOOR

Before You Begin: Tape down shelves to avoid movement during the process. The door of this appliance can be reversed to open on the left or right side. To reverse the door swing and open from the opposite side, follow these instructions and refer to the diagrams for clarity:

Removing the Door:

1. Remove the plastic caps on the left side top of the appliance.
(Keep the plastic caps and use for covering holes on the right side after the door is reversed.)
2. Remove the plastic cap from the upper hinge cover.
3. Hold the door, loosen the screws and remove the upper hinge.
4. Make sure to hold the door during the above step.
5. Lift the door off the lower hinge and place the door on a padded surface to avoid damage or scratches.
6. Unscrew and remove the lower hinge and door pin.

Follow the diagram for visual assistance during each step.

Figure 1

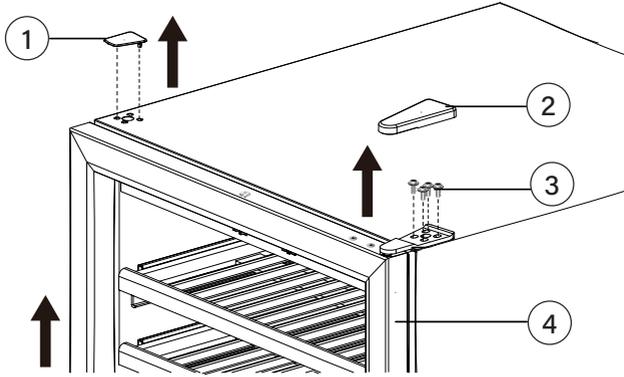


Figure 2


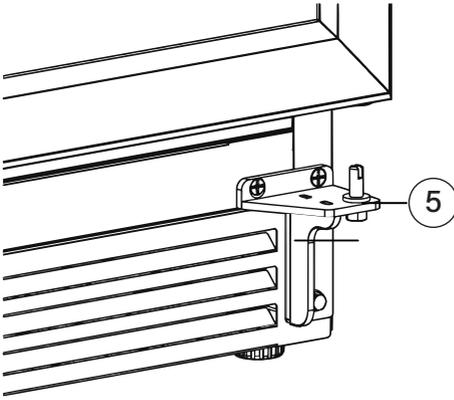


Figure 3

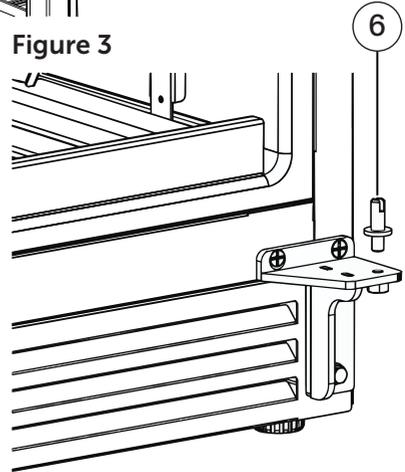

Installing the Door:

1. Remove the screws and two rubber caps covering the holes on the left side of the lower hinge position.
2. Take the lower hinge from the left side and install it to the left side lower hinge position.
3. Turn the door 180° and put it onto the left side lower hinge and hold it at close position.
4. Reverse the upper hinge direction, and fix it to the top of the door. Do not fully tighten the screws until the top of the door is level with the top of the appliance.
5. Fix the upper hinge on the top of the unit. Adjust the door to make sure it is level with the top of the appliance. Then tighten all the screws. Install the hinge cover.
6. Replace the plastic cap to cover the holes where you removed the hinge.

Figure 4

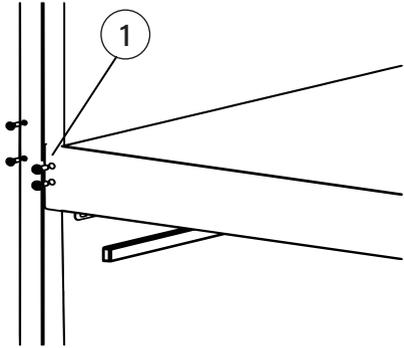


Figure 5

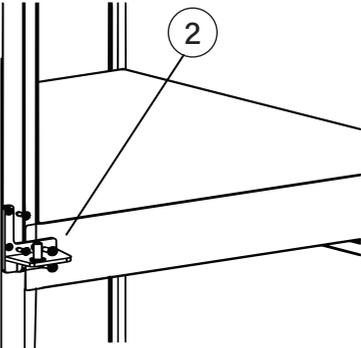


Figure 6

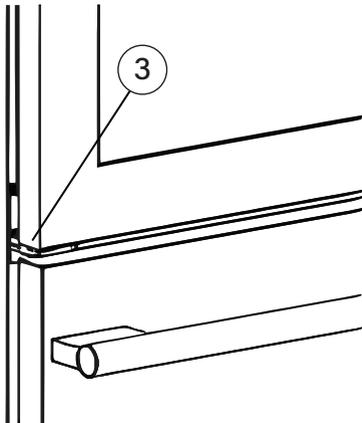


Figure 7



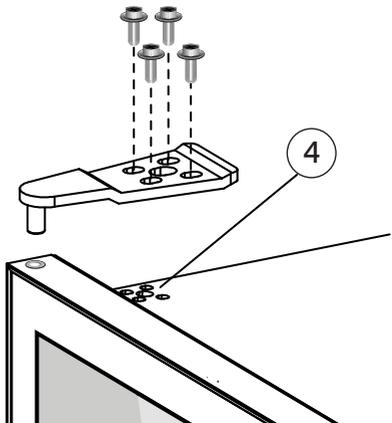


Figure 8

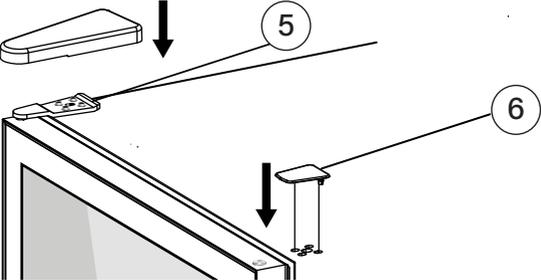

CONTROL PANEL

The digital thermostat can be found inside the appliance.

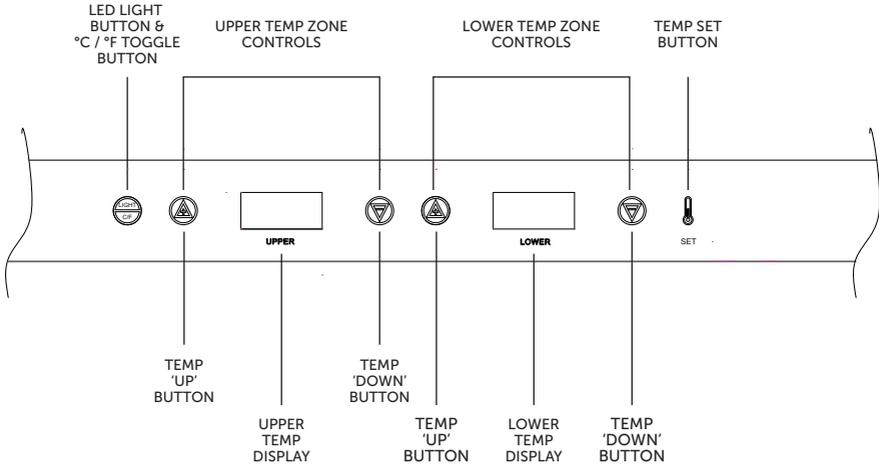

OPERATION PROCEDURE

- Connect the appliance to a dedicated power source and the display will automatically turn on.
- **Setting the Temperature:** To set the desired temperature for the upper or lower temperature zone, short press the 🌡️ button, and then short press the ⚠️ or ⚡ buttons to set the zone to the desired temperature.
- **Internal LED Light:** To turn the internal LED light on or off, short press the 🌟 button.
- **Changing °C / °F:** To toggle the temperature display between Celsius and Fahrenheit, long press the 🌡️ button for 3 seconds.

IMPORTANT NOTES:

- **Restarting the Appliance:** If the appliance is unplugged, loses power, or is turned off, wait 3 to 5 minutes before restarting. The compressor protection prevents the appliance from starting immediately.
- **First-Time Use or Long-Term Restart:** When using the appliance for the first time or restarting after a long period, a few degrees variance between the selected temperature and the LED readout is normal. The display will show the correct set temperature after a few hours of operation.

INTERNAL CLEANING

- Remove accessories and clean separately with soap and water (do not use a dishwasher to clean any accessories).
- Avoid abrasive materials or detergents.
- Rinse with clean water and dry thoroughly.
- Reconnect the plug with dry hands after cleaning.

EXTERNAL CLEANING

- Do not pour water over the appliance or wash with a high-pressure water jet. Wash the exterior of the appliance with warm soapy water.
 - PLEASE DO NOT use abrasive materials or detergents.
 - Dust the compressor at the back with a brush or vacuum cleaner once or twice a year to prevent dust accumulation, which can impact performance and increase energy consumption.
 - Do not use any sharp objects when cleaning.
-

FOOD STORAGE

- The appliance compartment and refrigerator drawers are suitable for short-term storage of fresh food. The temperature inside varies depending on the amount of food stored.
 - To maintain good cooling efficiency and save energy, we recommend less frequent opening and closing of the appliance door/s.
 - Do NOT overload the appliance and ensure you keep enough space around items for cold air flow.
 - Do not block any ventilation openings.
-


ENERGY SAVING TIPS

- Place the appliance in the coolest area of the room, away from any heat-producing appliances and out of direct sunlight.
 - Do NOT overload the appliance as the compressor will run longer.
 - Do not set the thermostat on excessively cold temperatures.
-

SURGE PROTECTOR PLUG

TO AVOID ELECTRICAL SURGES, IT IS ADVISED TO USE A SURGE PROTECTOR PLUG.

Please note that this must be purchased separately and does not come with the appliance.

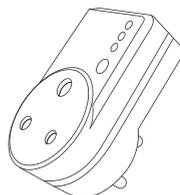

TROUBLESHOOTING

Should you experience any issues with your appliance and the below troubleshooting tips do not resolve the fault experienced, kindly contact SnoMaster Service Department or your nearest accredited Service Agent:

PROBLEM	PROBLEM POSSIBLE CAUSE / MEASURE
Appliance is not turning on	<ul style="list-style-type: none"> • Check if the appliance is correctly switched on. • Check if there has not been load shedding or a power cut. • Check if plug is not faulty or damaged. • Check if voltage is correct.
Temperature within the appliance is not getting cold enough	<ul style="list-style-type: none"> • Check that the appliance is not overloaded. • Check if appliance is not placed in direct sunlight. • Check if door is closed completely/ not frequently opening the appliance. • Check door gasket if not sealing properly and check for damages or tears on the gasket. • Check if the appliance has enough breathing room (+/- 150mm) all round the appliance.
Temperature within the appliance is too cold	<ul style="list-style-type: none"> • Please relocate the appliance to a warmer area, preferably at room temperature. • Not enough ventilation around the appliance. • Check if thermostat probe is not faulty, if so please contact SnoMaster service to replace.
Moisture forms on the inside/ outside walls of the appliance	<ul style="list-style-type: none"> • Hot and humid weather usually in the coastal locations increases the internal rate of condensation. This is normal. • Set the temperature to a higher setting to avoid condensation. • Condensation may occur seasonally depending on humidity and ambient temperature. • Open the door less frequently and ensure it is closed properly at all times.
Exterior of appliance is wet	<ul style="list-style-type: none"> • Condensation will form on the outside of the appliance if it operates in humid areas or in the rainy season, simply wipe it dry with a non-abrasive cloth.

TROUBLESHOOTING

PROBLEM	PROBLEM POSSIBLE CAUSE / MEASURE
Smell/Odour	<ul style="list-style-type: none"> • Check for spillages on each shelf/drawer. You may need to remove the shelves/drawers to check that no spillages have settled underneath them. • Double check if all foods and drinks in the appliance have not expired. If they have expired, then they should be removed immediately. • Placing charcoal in the appliance for a while can also help eliminate the smell/odour.
Door does not close properly	<ul style="list-style-type: none"> • Check if door gasket/seal is not torn or worn out. • Check if door compartments and shelves are correctly placed inside the appliance. • Check if the appliance is leveled. • Ensure there are no obstructions preventing the door closure.
Unusual noises/ Gurgling or Crack- ing Noises	<ul style="list-style-type: none"> • Ensure appliance is positioned level on the ground. • Caused by the flow of refrigerant when each cooling cycle ends. • Check if there is enough spacing around the appliance and ensure it is not touching other items. • This is normal, as the appliance makes a sound when the unit is expanding and contracting along its walls. • The pipes might be touching or some parts came loose, please contact a service agent.
Appliance door not opening	<ul style="list-style-type: none"> • If the door has just been opened, leave it for a few minutes to allow air pressure to equalise before trying to open it again.
Exterior surface is warm	<ul style="list-style-type: none"> • This is normal while the compressor works to transfer heat from inside the appliance cabinet it can reach up 70-90°C.
Compressor runs for 1-5 mins/continuously	<ul style="list-style-type: none"> • The ambient temperature is too high, please relocate the appliance to a better ventilated or cooler area. • The voltage is incorrect, switch off the appliance and restart when the power has stabilised.

TROUBLESHOOTING

PROBLEM	PROBLEM POSSIBLE CAUSE / MEASURE
Compressor runs but the interior is not getting cold	<ul style="list-style-type: none"> • The appliance has leaked or the system may be blocked, please contact a service agent.
The digital display is not turning on	<ul style="list-style-type: none"> • Check that the appliance is correctly switched on. • Check that the plug is not damaged or faulty. • The Main control board is damaged or faulty and needs to be replaced.
LED panel is displaying an error	<ul style="list-style-type: none"> • The Display may be faulty / the control board is damaged or faulty and needs to be replaced.
The digital display buttons are not functional	<ul style="list-style-type: none"> • The temperature controller panel is damaged or faulty and needs to be replaced.
The interior LED light does not switch on	<ul style="list-style-type: none"> • The LED light needs to be replaced. • The Main control board is faulty or damaged. • The light panel is faulty or damaged.



ICE COLD ANYWHERE

**JOHANNESBURG LIFESTYLE
CENTRE & SERVICE CENTRE**

49 Koornhof Road
Meadowdale
Germiston, 1614
011 392 5315 / 3147
info@snomaster.co.za

**CAPE TOWN LIFESTYLE CENTRE
& SERVICE CENTRE**

31 Stella Road
Montague Gardens
Cape Town, 7441
021 100 5695
info@snomaster.co.za

snomaster.co.za



@SnoMasterSA



SnoMaster SA



snomaster_south_africa



@SnoMaster