




ICE COLD ANYWHERE

USER MANUAL AND PRODUCT SPECIFICATIONS

ABSORPTION MINIBAR COOLERS

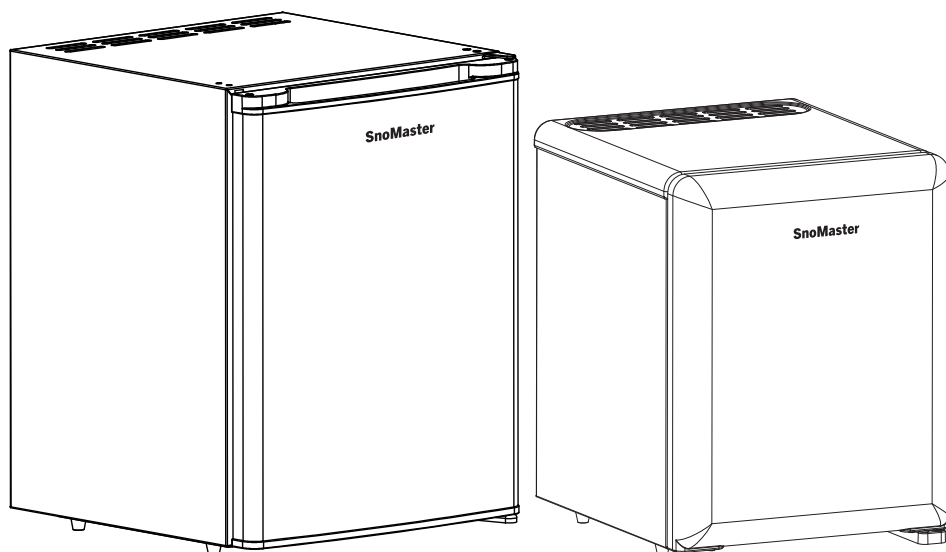

MODELS:

SMBC-30A

SMBC-60A

CONTENTS

WARRANTY, SERVICE AND SUPPORT	01
Warranty Registration	
Service and Support	
IMPORTANT SAFETY INFORMATION	02
Before Using Your Appliance	
Critical Safety Information	
PRODUCT FEATURES	04
INSTALLATION INSTRUCTIONS	05
OPERATING PROCEDURE	07
TROUBLESHOOTING	09



THANK YOU FOR PURCHASING YOUR SNOMASTER ABSORPTION MINIBAR COOLER

• WARRANTY, SERVICE AND SUPPORT •

This product is warranted for **2-years from the date of purchase**. Warranty does not cover products that have not been used in accordance with the user guide or are outside the warranty terms and conditions, which can be found at the following url:

<https://snomaster.co.za/warranty/>

WARRANTY REGISTRATION

Register your SnoMaster Absorption Minibar Cooler now for warranty, and allow us to provide you with the best possible after sales service:

- Please log onto our website at **www.snomaster.co.za**
- Click on the 'Warranty' tab.
- Enter warranty information and upload proof of purchase at the bottom of the page.

SERVICE AND SUPPORT

Should an instance arrive where you require assistance, contact our service team:

- Please log onto our website at **www.snomaster.co.za**
- Click on the 'Support' tab.
- Click 'Find a Repair Agent Near You' and enter your region.
- Alternatively contact us via email: **info@snomaster.co.za** or contact us on **+27 11 392 5315**.

IMPORTANT SAFETY INFORMATION

ABSORPTION MINIBAR COOLER

This manual contains important information including safety, installation, maintenance and warranty instructions of the SnoMaster range of Absorption Minibar Coolers. Please read this manual carefully before use and follow all safety information and instructions. It is recommended to keep this manual for easy reference so that you are familiar with the operation and maintenance of your appliance.

Before using this appliance, ensure it is correctly positioned and installed as outlined in this manual. Follow these basic precautions to prevent the risk of fire, electrical shock, or injury:

- This appliance is designed for domestic or commercial indoor use only and is exclusively intended for storing beverages and foodstuffs.
- Ensure the incline angle of the appliance is not more than 45° during transportation or operation.
- Before using your appliance for the first time, you should wait about 12 hours after positioning it in place.
- Ensure sufficient personnel are available to move and install the appliance to prevent damage or injuries.
- The appliance needs to be levelled for optimal operation. You can adjust the appliance feet to level it +/- 10mm.
- Ensure the plug is easily accessible after positioning the appliance.
- Avoid connecting or disconnecting the electric plug with wet hands.
- To disconnect the appliance, grip the plug and pull it from the wall outlet. Never pull out the plug by the cord.
- It is advisable to use a dedicated power source and avoid using extension cords.
- Please unplug the appliance or disconnect the power before performing any cleaning, maintenance, or servicing.
- If the appliance power supply cord is damaged, it must be replaced by SnoMaster, its approved agents, or a similarly qualified person to prevent any hazard.

- It is recommended that the circuit breaker size should be no more than 20 amps.
 - This appliance operates on a single-phase voltage of 220-240V/50Hz, to avoid electrical surges, it is advised to use a surge protector plug.
 - Cleaning and maintenance should be supervised by adults, especially if children are involved.
 - The keys to the appliance doors should be kept out of the reach of children.
 - The appliance should be placed on a flat surface and should be completely unobstructed. Ensure to leave 150mm space around the appliance to ensure proper ventilation of the appliance. Place the appliance away from direct sunlight and heat sources (stove, heater, radiator, etc.).
 - Unless specifically recommended in this manual, do not attempt to repair or replace any part of the appliance. All other servicing should be referred to a qualified technician.
 - Never clean appliance parts with flammable fluids as they may create a fire hazard or explosion. Also, avoid storing or using petroleum or other flammable vapours and liquids near this appliance.
 - Avoid solvent-based cleaning detergents or abrasives on the interior or exterior as they may damage or discolour it.
 - **This appliance contains Cyclopentane and R717 / 70g refrigerant, which is FLAMMABLE and may cause a fire or an explosion.**
-



WHEN DISPOSING OF THE APPLIANCE

Please observe the following instructions:

- Always ensure the appliance is out of reach of children. Before disposing of it, damage the body and remove the door/s to prevent children from climbing inside.
- Follow the instructions of your local regulations when disposing of the appliance.

PRODUCT FEATURES

SOLID DOOR (REVERSIBLE) | INTERNAL MANUAL THERMOSTAT | ABSORPTION OPERATED COOLING SYSTEM | FLAT INTEGRATED EVAPORATOR | QUIET OPERATION | LOW ENERGY CONSUMPTION | SLIDING METAL SHELVES | ADJUSTABLE BEVERAGE CAN RACKS INSIDE DOOR | INTERNAL LED LIGHT

SPECIFICATIONS:

SMBC-30A: 28L ABSORPTION MINIBAR COOLER

- **Dimensions (mm) Unit:** (H) 532 (L) 410 (W) 476
 - **Dimensions (mm) Packaged:** (H) 555 (L) 460 (D) 510
 - **Storage Volume:** 28L
 - **Temperature Zone:** 0°C to 10°C
 - **Net Weight:** 16Kg
 - **Voltage:** 220-240V/50HZ
 - **Input Power:** 65W
 - **Rated Current:** 0.3A
 - **Lamp Power:** 0.1A
 - **Colour:** Black
 - **Suggested Applications:** Hotel, B&B, Home Bar, Kitchen, Apartment
 - **Design Criteria:** Engineered for the African Climate
-

SMBC-60A: 47L ABSORPTION MINIBAR COOLER

- **Dimensions (mm) Unit:** (H) 605 (L) 460 (W) 480
- **Dimensions (mm) Packaged:** (H) 640 (L) 510 (W) 535
- **Storage Volume:** 47L
- **Temperature Zone:** 0°C to 10°C
- **Net Weight:** 20Kg
- **Voltage:** 220-240V/50HZ
- **Input Power:** 65W
- **Rated Current:** 0.3A
- **Lamp Power:** 0.1A
- **Colour:** Black
- **Suggested Applications:** Hotel, B&B, Home Bar, Kitchen, Apartment
- **Design Criteria:** Engineered for the African Climate

INSTALLATION INSTRUCTIONS



Before installing your new appliance, please read all safety instructions in this manual and follow the installation instructions below:

- Remove the appliance from the box, ensure all packaging materials, stickers and films are removed from the product. Clean the appliance's surfaces with a mild detergent and a damp cloth before initial use.
- Clean the interior, shelving and doors with a mild detergent and damp cloth before initial use.
- Ensure the appliance is placed on a level, sturdy surface.
- Ensure adequate air circulation for the appliance by maintaining a clearance of at least 150mm on all sides.
- The minibar cooler refrigeration system is designed to operate with the cabinet located on a sturdy, flat surface. Avoid tilting the cabinet side.
- If the cabinet needs to be tilted at an angle for handling or moving purposes, ensure to leave the minibar cooler in an upright position for 20 to 30 minutes prior to plugging it back in.


INSTALLING THE ABSORPTION MINIBAR COOLER

To ensure proper air circulation, maintain a minimum 12cm gap between the unit and the wall. Position the unit away from direct sunlight to optimise performance and conserve energy.

- Do not cover the top ventilation grid with any objects, as this will obstruct warm air circulation and affect the unit's cooling efficiency.
- Refer to installation diagram on next page.

SURGE PROTECTOR PLUG

TO AVOID ELECTRICAL SURGES, IT IS ADVISED TO USE A SURGE PROTECTOR PLUG.

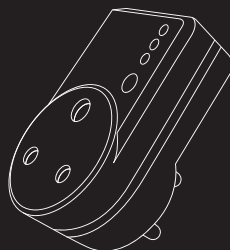

OPERATING PROCEDURE


- Connect the power cable to a power source.
- Adjust the temperature by turning the internal manual thermostat to the desired temperature.

AUTOMATIC DEFROSTING

- This appliance is equipped with an automatic defrosting system. The unit periodically melts frost that accumulates on the cooling elements, preventing frost build-up and maintaining optimal performance. No manual defrosting is required, making the appliance easier to maintain and operate.

TEMPERATURE CONTROL

- The temperature inside the minibar cooler can be set between 0°C and 10°C.
- To adjust the temperature, turn the manual thermostat knob.
- Turning it clockwise will lower the temperature, where '5' is the coldest temperature setting (0°C).
- To turn the minibar cooler off, turn the manual thermostat knob in the counterclockwise position to the 'OFF' position, which will turn the minibar cooler off.

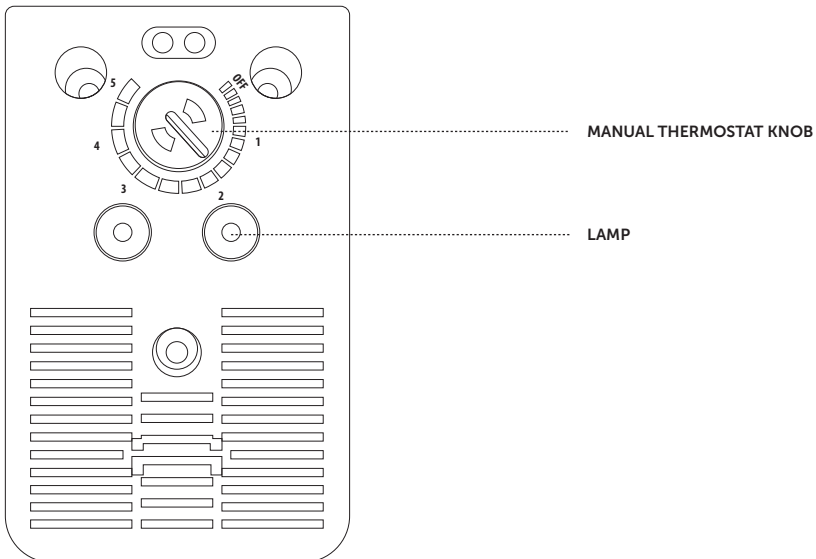

REVERSING THE DOOR

- Using a screwdriver, remove the screws and take off the lower hinge of the door.
- Carefully lift the door off the unit and set it aside.
- Remove the two screws from the left top hinge position and take off the metal bracket.
- Unscrew the two screws from the right top hinge, remove the hinge, and attached the metal bracket with the screws.
- Reattach the door by inserting the lower hinge axle into the bottom hole on the right side of the door.
- Secure the spare hinge to the left top position of the cabinet. Adjust the door to ensure it is straight and aligned with the cabinet.

Note: During shipment, the door gasket may have been compressed. After reversing the door, you may need to reset the gasket to ensure a proper seal and prevent air from escaping. If there's a gap between the gasket and the cabinet, gently pull the gasket out to close the gap. If needed, you can also use a hair dryer to warm the gasket and help it conform to the door.

INTERNAL CLEANING

- Remove accessories and clean separately with soap and water (do not clean accessories using a dishwasher).
- Avoid abrasive materials or detergents.
- Rinse with clean water and dry thoroughly.
- Reconnect the plug with dry hands after cleaning.

EXTERNAL CLEANING

- Do not pour water over the appliance or wash with a high-pressure water jet. Wash the exterior of the appliance with warm soapy water.
- PLEASE DO NOT use abrasive materials or detergents.
- Dust the compressor at the back with a brush or vacuum cleaner once or twice a year to prevent dust accumulation, which can impact performance and increase energy consumption.
- Do not use any sharp objects for cleaning.

FOOD STORAGE

- The appliance compartment is suitable for short-term storage of fresh food. The temperature inside varies depending on the amount of food stored.
- To maintain good cooling efficiency and save energy, we recommend less frequent opening and closing of the appliance doors.
- Do NOT overload the appliance and ensure you keep enough space around items for cold air flow.

ENERGY SAVING TIPS

- Place the appliance in the coolest area of the room, away from any heat-producing appliances and out of direct sunlight.
- Do NOT overload the appliance as the compressor will run longer.
- Do not set the thermostat on excessively cold temperatures.

TROUBLESHOOTING

Should you experience any issues with your appliance and the below troubleshooting tips do not resolve the fault experienced, kindly contact SnoMaster Service Department or your nearest accredited Service Agent:

PROBLEM	PROBLEM POSSIBLE CAUSE / MEASURE
Appliance is not turning on	<ul style="list-style-type: none">• Check if the appliance is correctly switched on.• Check if there has not been load shedding or a power cut.• Check if plug is not faulty or damaged.• Check if voltage is correct.
Temperature within the appliance is not getting cold enough	<ul style="list-style-type: none">• Check that the appliance is not overloaded.• Check if appliance is not placed in direct sunlight.• Check if door is closed completely/ not frequently opening the appliance.• Check door gasket if not sealing properly and check for damages or tears on the gasket.• Check if the cooler does not have the correct clearances at the sides/back.
Temperature within the appliance is too cold	<ul style="list-style-type: none">• Please relocate the appliance to a warmer area, preferably at room temperature.• Not enough ventilation around the unit.• Check if Thermostat probe is not faulty, if so please contact SnoMaster support to replace.

PROBLEM	PROBLEM POSSIBLE CAUSE / MEASURE
Moisture forms on the inside/ outside walls of the appliance	<ul style="list-style-type: none"> • Hot and humid weather usually in the coastal locations increases the internal rate of condensation. This is normal. • Set the temperature to a higher setting to avoid condensation. • Condensation may occur seasonally depending on humidity and ambient temperature. • Open the door less frequently and ensure it is closed properly at all times.
Exterior of appliance is wet	<ul style="list-style-type: none"> • Condensation will form on the outside of the appliance if it operates in humid areas or in the rainy season, simply wipe it dry with a non-abrasive cloth.
Smell/Odour	<ul style="list-style-type: none"> • Check for spillages inside the appliance. You may need to remove all contents and check that no spillages have settled underneath them. • Double check if all foods and drinks in the appliance have not expired. If they have expired, then they should be removed immediately. • Placing charcoal in the appliance for a while can also help eliminate the smell/odour.
Appliance door not opening	<ul style="list-style-type: none"> • If the door has just been opened, leave it for a few minutes to allow air pressure to equalize before trying to open it again.
Unusual noises/ Gurgling or Crack-ing Noises	<ul style="list-style-type: none"> • Ensure appliance is positioned level on the ground. • Caused by the flow of refrigerant when each cooling cycle ends. • Check if there is enough spacing around the appliance and ensure it is not touching other items. • This is normal, as the appliance makes a sound when the unit is expanding and contracting along its walls. • The pipes might be touching or some parts came loose, please contact a service agent.



ICE COLD ANYWHERE

**JOHANNESBURG LIFESTYLE
CENTRE & SERVICE CENTRE**

49 Koornhof Road
Meadowdale
Germiston, 1614
011 392 5315 / 3147
info@snomaster.co.za

**CAPE TOWN LIFESTYLE CENTRE
& SERVICE CENTRE**

31 Stella Road
Montague Gardens
Cape Town, 7441
021 100 5695
info@snomaster.co.za

snomaster.co.za



@SnoMasterSA



SnoMaster SA



snomaster_south_africa



@SnoMaster